






13551.08

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

# CB Radio Mount, Windshield, 97-02

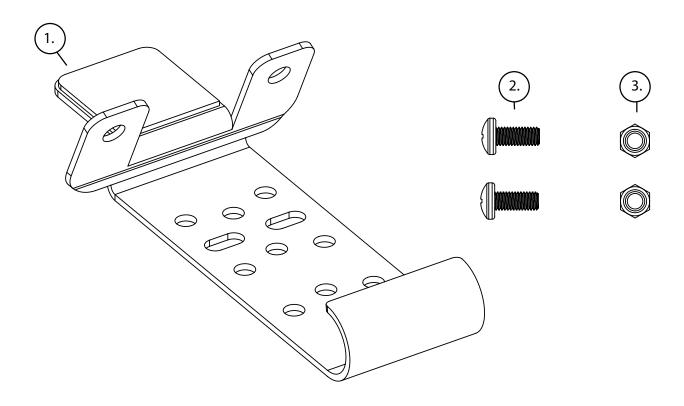

## Components

1. CB Mount	(1)
2. Bolt	(2)
3 Nylon Lock Nut	(2)

#### **OMIX-ADA® TECHNICAL SUPPORT**

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com









460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## CB Radio Mount, Windshield, 97-02


1. Remove center footman loop by removing (2) Torx Screws

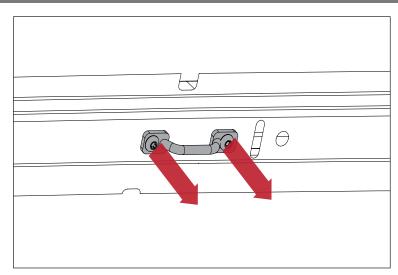

2. Reuse factory Torx Screws to install CB Mount with footman loop on outside as shown.

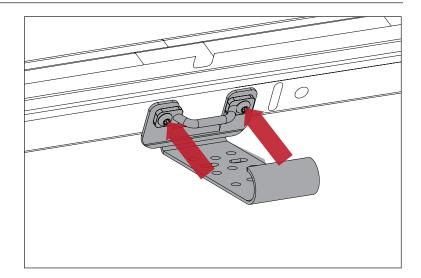

3. Install CB Radio with supplied nuts and bolts.

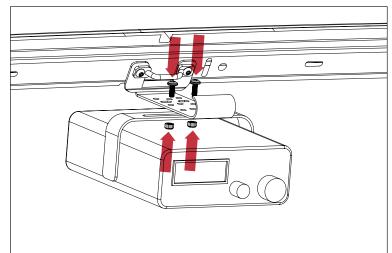

### **NOTICE**

Make Sure any installed devices are secure and safe. Do not obstruct rear view mirror.