

TERMINATOR[™]EFI

PN 20-152

Terminator Ford Transmission Kickdown Bracket Kit

1. Install adjusting screw retaining clip on kickdown lever (Figure 1).
2. Insert kickdown screw in retaining clip (Figure 1).
3. Remove the lock out screw from the throttle lever (Figure 2).
4. Install the spring perch bracket using the existing baseplate screw/stud, as well as adding the new 1/4-20 x 5/8 screw and lockwasher (Figure 1).
5. Install the spring as shown in Figure 1.
6. Adjust screw for desired kickdown operation.

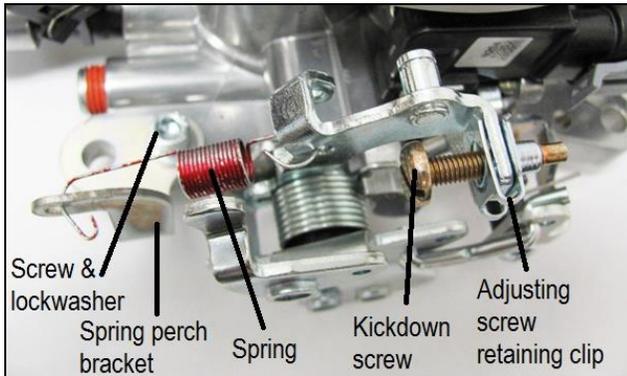


Figure 1



Figure 2

199R10666
Revision Date: 4-4-14

© 2013 Holley Performance Products, Inc. All rights reserved.
Tech Support: 1-866-464-6553

TERMINATOR[™]EFI

PN 20-152

Terminator Ford Transmission Kickdown Bracket Kit

1. Install adjusting screw retaining clip on kickdown lever (Figure 1).
2. Insert kickdown screw in retaining clip (Figure 1).
3. Remove the lock out screw from the throttle lever (Figure 2).
4. Install the spring perch bracket using the existing baseplate screw/stud, as well as adding the new 1/4-20 x 5/8 screw and lockwasher (Figure 1).
5. Install the spring as shown in Figure 1.
6. Adjust screw for desired kickdown operation.

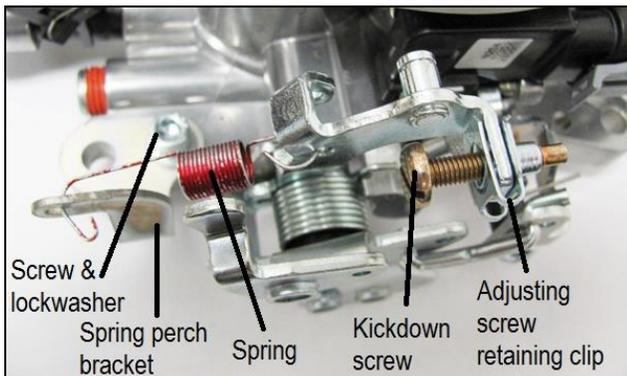


Figure 1



Figure 2

199R10666
Revision Date: 4-4-14

© 2013 Holley Performance Products, Inc. All rights reserved.
Tech Support: 1-866-464-6553